
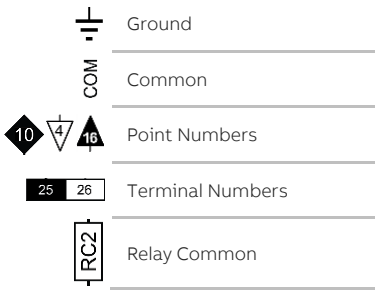
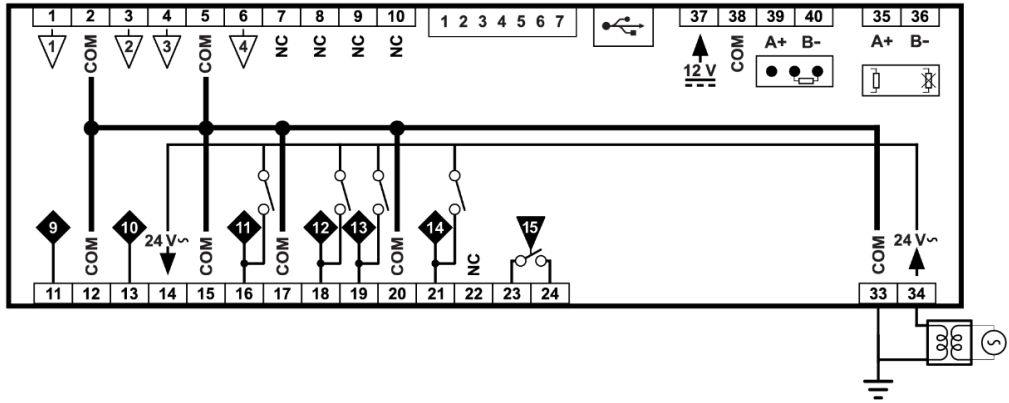


INSTALLATION AND WIRING

BDS0026 rev 8

# CBT-4T4-2U1R

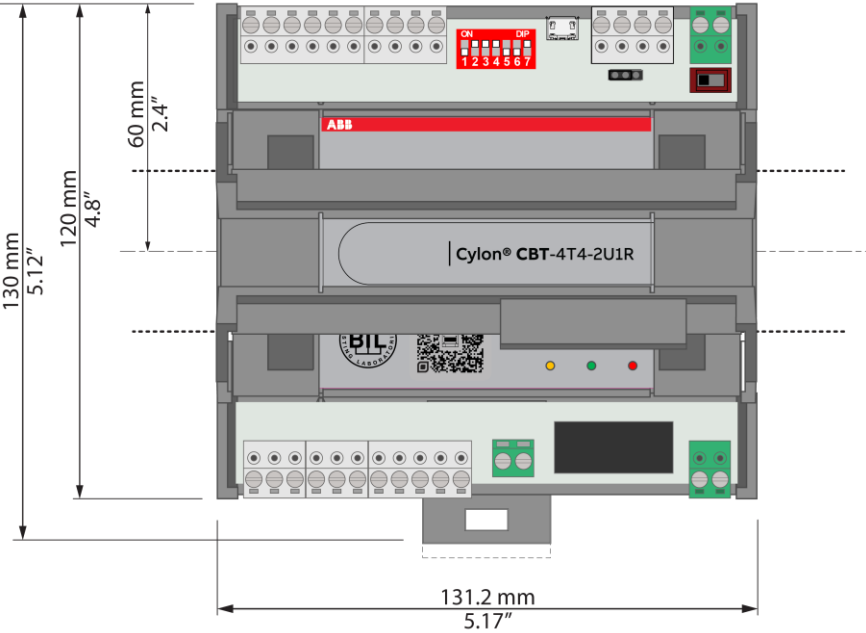

Location	Illustration	Terminal Numbers	Description
		33, 34	Power 24 V AC <b>Important:</b> The common power connection (terminal 33 $\perp$ ) must be connected to Earth. Cylon recommend that this is done at the 24 V AC transformer.
		16 ... 21	UniPuts™ with Triac



Location	Illustration	Terminal Numbers	Description
		1 ... 6	Universal Inputs
		11, 13	UniPuts™
		14	24 V AC output
		23,24	Relay digital output 240 V AC, Maximum Load: 240 V AC / 8 A Max
			<b>WARNING: HAZARDOUS VOLTAGES.</b> DISCONNECT SUPPLY TO MAINS RELAYS AND 24 V AC TO UNIT BEFORE WIRING.
		35, 36	BACnet MS/TP Port
			<b>Important:</b> In order for the BACnet MS/TP bus to operate reliably, the common power connection (terminal 33 $\frac{1}{2}$ ) must be connected to Earth. Cylon recommend that this is done at the 24 V AC transformer.
		37 ... 40	Keypad Port
		37, 38	Room Display / CBT-STAT Power supply
		39, 40	Room Display / CBT-STAT RS485
			Room Display / CBT-STAT Terminator
			OFF (Not Terminated) ON (Terminated)
			BACnet MS/TP Terminator
			The Modbus Terminator Switch is located below the port. If the switch is towards the  icon, then termination is <b>in</b> and if the switch is towards the  icon then termination is <b>out</b> .
			Service Port (micro-USB)
			<b>Note:</b> Service Port must not be connected until after the device is powered on.

#### Indicator LEDs

	<p><b>Red LED</b></p> <p>Continuous: Optional battery is healthy. Flash once a second: Indicates no battery/battery is low.</p> <p><b>Note:</b> Battery is present only on custom versions.</p> <p><b>CAUTION - DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISPOSE OF USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.</b></p>
	<p><b>Green LED</b></p> <p>Continuous: Strategy servicing and no comms. Flash rapidly (every 100 ms): Strategy not servicing. Flash once a second: MSTP comms, and Strategy servicing.</p> <p><b>Note:</b> When Service Port is in use, the Green LED blinks off as Service Port comms are received.</p>
	<p><b>Yellow LED</b></p> <p>Off: Normal operation. On: Priority Array set above 16, for one or more Hardware Points, by external BACnet Client, or by CXpro<sup>HD</sup>.</p>

	<p><b>Cycle Yellow-Green-Red (left-to-right)</b> Controller is in terminal mode.</p>
	<p><b>Cycle Red-Green-Yellow (right-to-left)</b> Upgrade in progress while Controller is in terminal mode.</p> <p><b>Note:</b> The strategy is not serviced while in upgrade mode.</p>
	<p><b>Cycle green to yellow</b> Globals communication/setup problem</p>
	<p><b>Green and yellow flash simultaneously</b> Globals communication/setup problem and Hardware Point Priority Array is set above 16 by external BACnet Client, or by CXpro<sup>HD</sup>.</p>