

# CBT14 with Rooftop Unit strategy User Manual



© 2016 American Auto-Matrix, A Cylon Energy Inc. Company. All Rights Reserved.

## CBT14 with Rooftop Unit strategy (MAN0130US rev 9)

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used only in accordance with the terms of those agreements. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or any means electronic or mechanical, including photocopying and recording for any purpose other than the purchaser's personal use without the written permission of American Auto-Matrix.

### TRADEMARKS

All trademarks and trade names used in this document are acknowledged to be the copyright of their respective holders.



# Contents

SECTION 1 : Getting Started	5
SECTION 2 : Installation Overview	9
Preparing to install the CBT14.....	10
Physical Installation of the controller.....	11
Wiring the CBT14 .....	11
Configuring the CBT14 for BACnet communications .....	19
SECTION 3 : Configuring the CBT14 Rooftop Unit Strategy	23
Setting CBT14 Rooftop Unit Configuration Codes using NetLink .....	25
SECTION 4 : CBT14 Rooftop Unit Control Sequences	31
SECTION 5 : Appendix : List of CBT14 points	39
Analog Points.....	40
Digital Points .....	43



# SECTION 1 : GETTING STARTED

## How to use this manual

The **CBT14** manual provides users with the information needed to install and configure the controller for the various application specific requirements.

## CBT14

The **CBT14** is a configurable BACnet MS/TP device designed to be used within a BACnet system including existing eBuilding systems. The **CBT14** is available with a preloaded Rooftop Unit strategy designed to control a wide variety of constant volume common Rooftop Units (RTU) used in commercial HVAC installations. It is also possible to load a custom strategy or to modify the preloaded strategy to meet any application specific needs.

## CBT14 Strategy Version Information

This document (MAN0130US rev 9) applies to **CBT14 Rooftop Unit Strategy** version 1.0. The strategy version will be printed on the factory box label.

## Physical specifications

Size	5.12 x 5.17 x 1.78" (130 x 131.2 x 45 mm )
Enclosure	Injection molded ABS
Mounting	DIN rail <ul style="list-style-type: none"><li>• The housing base is designed for snap-mounting on DIN rails</li><li>• The controller should not be freely accessible after mounting</li><li>• Unit must be oriented such that powered relay terminals are at the bottom of unit</li></ul>

## Environmental Specifications

Ambient Temperature	32°-122°F (0° - 50°C) ambient.
Ambient Humidity	0% - 90% RH non-condensing
EMC Immunity	EN 61326-1
EMC Emission	EN 61326-1
Approvals	UL Listed (CDN & US) UL916 Energy Management Equipment - File No. E176435
Safety	EN 60730-1:2011 Automatic Action type i.e. Type 1.B.Y
Pollution Degree	Class 2 (EN 60730-1)

**Note: This equipment is intended for field installation within an enclosure.**

## Supporting Software

The following software is required to configure the **CBT14**.

### Engineering Center 7.0 or later versions

The **Engineering Center** is used to configure the controller for installation. Users will be able to set MS/TP addresses, baud rate, and configuration values using this software. Users will also be able to change the strategy and download their changes to the controller.

For commissioning the controller, it is recommended to use **NetLink** software or **CBT-STAT** devices.

### NetLink version 1.8 or later

**NetLink** is commissioning software for hand-held computers, available from the American Auto-Matrix Toolbox. **NetLink** software can be used to configure the controller for installation. Like the **Engineering Center**, users can set the MS/TP address, baud rate and configuration values with this software. Users will need the predefined **NetLink** screens that were developed for use with the preloaded strategy that comes shipped for the **CBT14**.

## Supporting files

The following files are needed for configuring the **CBT14** with Heat Pump Strategy. These are available from the American Auto-Matrix Toolbox (<http://www.aamatrix.com/toolbox>)

### Decoder Spreadsheet (CBT14HPDecoder.xlsx)

This spreadsheet is used to determine what configuration codes are needed to configure the **CBT14**. See *Configuring the CBT14 Rooftop Unit Strategy* on page 23 for instructions.

### Netlink screens (IO\_ConfigHP.nls)

These **NetLink** screens are used for configuration of the **CBT14**. See *Configuring the CBT14 Rooftop Unit Strategy* on page 23 for instructions.





## SECTION 2 : INSTALLATION OVERVIEW

## Preparing to install the CBT14

---

This section describes how to unpack the unit and how to prepare the site for installation of the **CBT14**. In order to ensure reliable operation of the controller, the installation site should meet the requirements listed in this section.

### Environmental and Electrical Requirements

The controller's immediate environment must meet the following specifications and comply with all local, state and Federal rules and regulations.

**Supply Voltage:** 24 V AC, 50/60Hz

**Note:** One side of the 24 V AC transformer must be grounded; refer to *Connecting Power to the CBT14* on page 11 for more information.


**Temperature:** Operating temperature is 32°... 122°F (0°... 50°C) ambient

### Unpacking the CBT14

The **CBT14** is shipped from the factory in its own box. Multiple **CBT14** boxes may be packaged together in a larger box. Upon receiving the **CBT14** controller shipment, immediately open and inspect the contents. Check outside of the box for any physical damage. Contact the shipper immediately to report any shipping-related damage to the product. American Auto-Matrix is not responsible for damage to the product caused by shipping, either by an American Auto-Matrix selected shipper or by a customer-specified shipping company.

## Physical Installation of the controller

The illustration below shows the mounting dimensions of the controller. Be sure to choose a location for the controller that allows the sufficient clearance for installation and servicing.

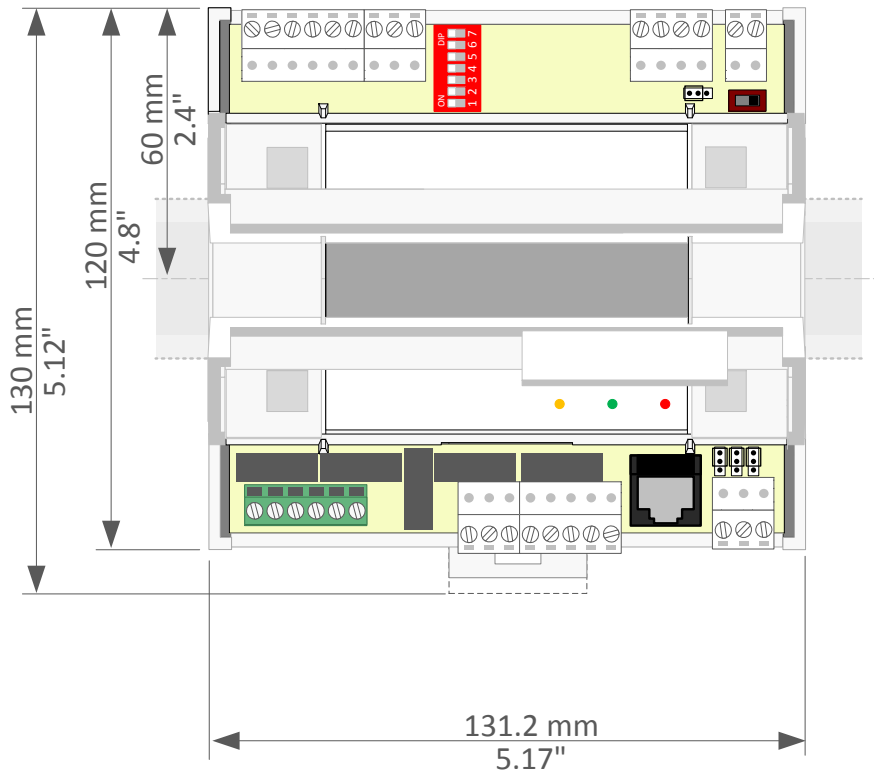


## Wiring the CBT14

Once the location has been determined, the **CBT14** can be wired for the network, the room sensors, and the elements of the Roof Top Unit. This section will address the various wiring considerations for the **CBT14**.

### Connecting Power to the CBT14

The **CBT14** requires 24 V AC +15% / -20% 50/60 Hz (SELV Power Source) at 55 VA maximum (up to 12 VA internal power plus up to 43 VA supplied to Triac loads) supplied from an externally mounted power transformer. One conductor of the 24 volt side of the transformer must be grounded to an earth ground to avoid damage to the controller. This conductor will be wired to the CMN (common) of the controller. The wiring diagram is shown below:

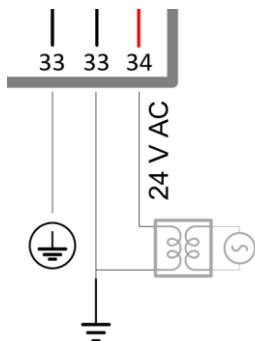


## Wiring the RS-485 Communications Network

Wiring the RS-485 network involves connecting the NET+ (35) and NET- (36) terminals in a daisy-chained configuration. One end of the network will be connected to the fieldbus of the Network level controller or BACnet router. At the other end of the network, the last device must be “terminated” by either installing a 100 ohm to 120 ohm resistor or, if the last device is a CBT14, users can switch the “Network Termination Switch” (BACnet MS/TP Terminator) to ON. This will effectively terminate the network. The shield, or drain wire, must be carried through the entire network.


If the RS-485 network is wired to an eSC, then the shield will be grounded at the eSC.

If the RS-485 network is wired to a CBR, the shield must be grounded at one point on the network as shown below:

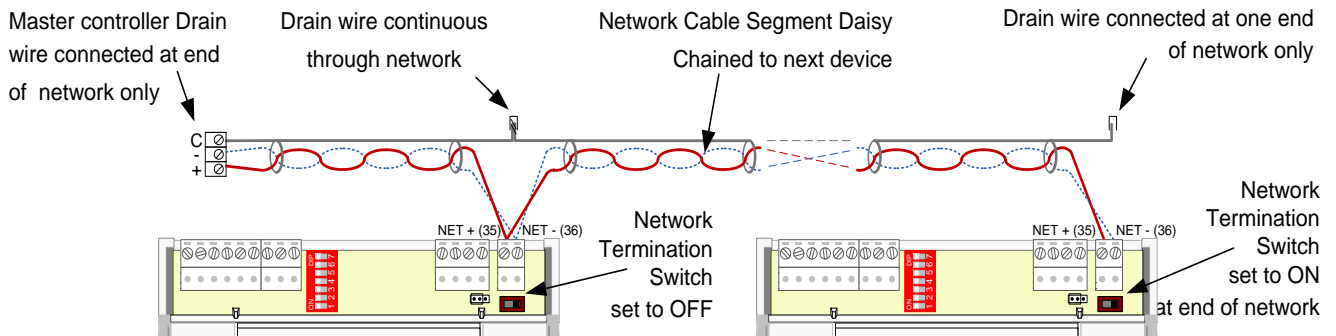

## Wiring the Universal Inputs

The CBT14 comes with 6 universal inputs. UI1, UI2, UI3 and UI4 are used for wiring in-room sensors, setpoint adjust, discharge air sensors, CO<sub>2</sub> sensors, relative humidity sensors and motion sensors, depending on the application (see *Wiring the Room Sensor* on page 14 for an example).

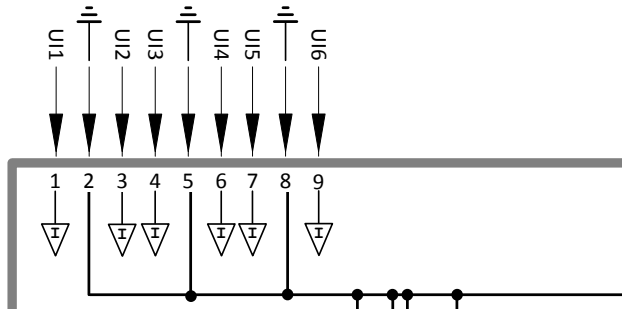

The sequences for this wide range of applications are available within the preloaded strategy. See *CBT14 Rooftop Unit Control Sequences* on page 31 of this manual for selecting the sequence for specific applications.

- UI1 will typically be where the room temperature sensor or return air temperature sensor is wired. If you are controlling to Return Air Temperature, this is where the return air temperature sensor is to be wired. This input is pre-configured to support a 10K Type III thermistor. All room sensors purchased from American Auto-Matrix are 10K Type III.

**Note:** Room sensors that short the thermistor for push button occupancy are supported with this controller.

- **UI2** will typically be where the room setpoint adjust is wired. This input is pre-configured to support a 5K potentiometer. All room sensors purchased from American Auto-Matrix are of this sensor type.
- **UI3** is a dedicated input that has been configured to support a 10K Type III thermistor. In the pre-loaded strategy this input is used for a discharge air temperature sensor for control using discharge air temperature reset.
- **UI4** is a dedicated input that has been configured to support a 10K Type III thermistor. In the pre-loaded strategy this input is used for a mixed air temperature sensor.
- **UI5** is a dedicated input that has been configured to support a 10K Type III thermistor. In the pre-loaded strategy this input is used for an outside air temperature sensor.
- **UI6** is configured as a voltage input and have a range of 0 ... 10 V dc. This input can be used for wiring in a CO<sub>2</sub> sensor, relative humidity sensor, or a motion sensor (must be a dry contact closure).

**Note:** To adjust the span for the CO<sub>2</sub> sensor

[CO2SensorBase \(A253\)](#) Low range of sensor, default is 0.

[CO2SensorSpan \(A254\)](#) Total range of sensor, default is 2000.

**Note:** To adjust the span for the relative humidity sensor


[CO2SensorBase \(A253\)](#) Low range of sensor, default is 0.

[CO2SensorSpan \(A254\)](#) Total range of sensor, default is 100.

IO POINTS	DESCRIPTION
UI1	Zone Temperature (with optional override button)
UI2	Setpoint Adjustment (optional 5K slider)
UI3	Discharge Temperature (optional)
UI3	Discharge Temperature (optional)
UI4	Mixed Air Temperature (optional)
UI5	Outdoor Air Temperature Sensor
UI6	CO <sub>2</sub> , Humidity or occupancy signal (all optional)


## Wiring the Room Sensor

The diagram below illustrates the typical room sensor that can be ordered from American Auto-Matrix. This is a standard room sensor with a space temperature type III thermistor, including a 5K setpoint slide adjust.

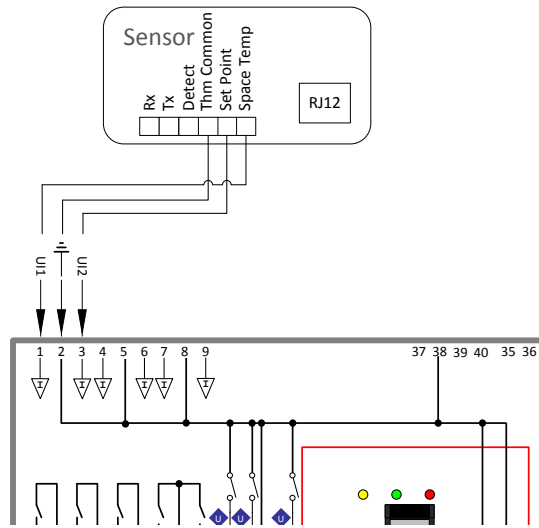


## Wiring for Serial Communications through Room Sensor

In addition to the sensor connection illustrated above, the sensor can pass through serial communications connected to its RJ-45 serial port. To pass these comms to the **CBT14**, the **Rx**, **Tx** and **Detect** terminals must be connected to the RJ-45 port in addition to the sensor connections, as illustrated below:

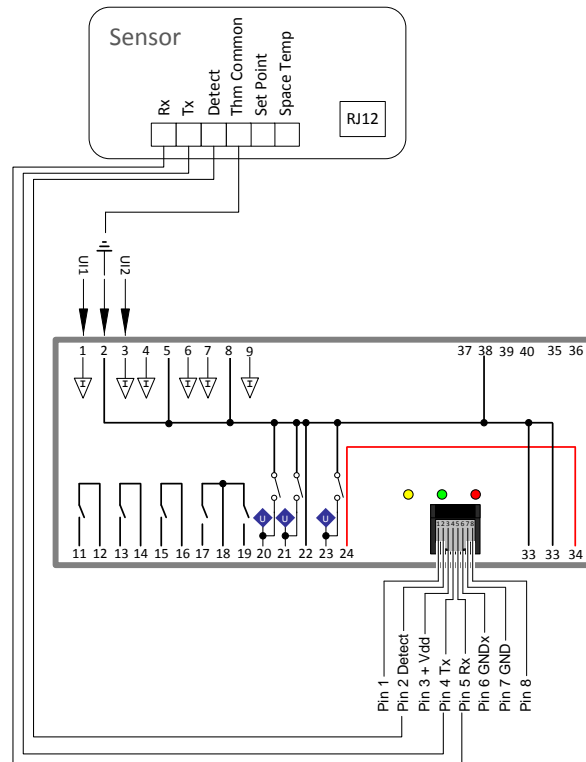

## Wiring the Digital and Analog Outputs

The **CBT14** comes with 5 digital outputs and 2 analog outputs for controlling a wide variety of possible elements. It is possible to control intermittent and continuous fans, staged heat, and tri-state heating valves depending on the application.

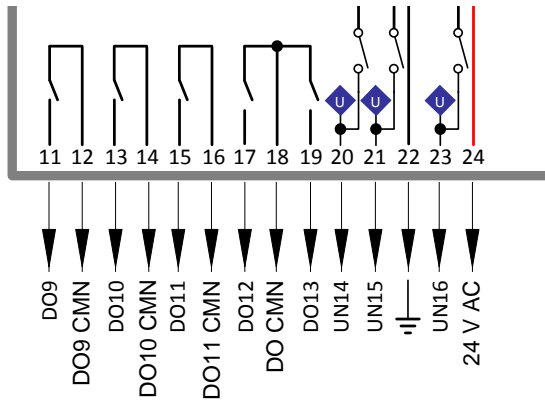

For the supplied strategy, the following are the output allocations:

- **DO9** is always used to control the fan.
- **DO10** can be used for stage 1 of heat when there are fewer than 4 stages of cooling. It is used for stage 1 of cooling when there are 4 stages of cooling. Can be used as heating tristate valve open when there are fewer than 3 stages of cooling configured.
- **DO11** can be used for stage 2 of heat when there are fewer than 3 stages of cooling. It is used for stage 1 of cooling when there are 3 stages of cooling and stage 2 of cooling when there are 4 stages of cooling. Can be used as heating tristate valve close when there are fewer than 3 stages of cooling configured.
- **DO12** can be used for stage 3 of heat when there are fewer than 2 stages of cooling. It is used for stage 1 of cooling when there are 2 stages of cooling and stage 2 of cooling when there are 3 stages of cooling and stage 3 of cooling when there are 4 stages of cooling. Can be used as cooling tristate valve open when there are fewer than 3 stages of heat configured.
- **DO13** can be used for stage 4 of heat when there are no stages of cooling configured. It is used for stage 1 of cooling when there is 1 stage of cooling and stage 2 of cooling when there are 2 stages of cooling and stage 3 of cooling when there are 3 stages of cooling and stage 4 of cooling when there are 4 stages of cooling. Can be used as cooling tristate valve close when there are fewer than 3 stages of heat configured.

**Note:** The number of stages (heat and cool) cannot exceed 4. Configuring the **CBT14** for more than 4 stages total will lead to unpredictable results. If tristate heat is configured stages of cooling cannot exceed 2. If tristate cooling is configured, stages of heat cannot exceed 2 as such a configuration will lead to unpredictable results.

- **UN14** is configured for controlling a modulating heating valve.
- **UN15** is configured for controlling a modulating cooling valve.
- **UN16** is configured for controlling a modulating economizer damper.

**Note:** By default, UN14, UN15 and UN16 (in Analog Output mode) are configured as direct acting 0 ... 10 V dc. However, it is possible to define any Analog Outputs as being reverse acting 10 ... 0 V dc. Depending on the actuator being controlled it is also possible to change the voltage range for 2 ... 10 V dc or 10 ... 2 V dc for any Analog Output.


IO POINTS	DESCRIPTION
DO9	Supply Fan Start/Stop
DO10	Stage Electric Heat / Cool {See Above} (optional PWM) or Tri-State Heat Valve Open
DO11	Stage Electric Heat / Cool {See Above} (optional PWM) or Tri-State Heat Valve Close
DO12	Stage Electric Heat / Cool {See Above}
DO13	Stage Electric Heat / Cool {See Above}
UN14	Modulating Heat Control
UN15	Modulating Cool Control
UN16	Modulating Economizer Dampers



## Digital Output Terminals


The **CBT14** can be wired to switch up to 240 V AC on Digital Outputs DO9, DO10 and DO11, and up to 24 V AC on DO12 and DO13. The relay outputs are Normally-Open dry-contact only and can be wired to switch hot or common.

To switch 24 V AC, users must wire an externally-sourced 24 V AC hot to terminal 18 DO CMN (triac common) on the **CBT14**. The 24 V AC can be sourced from the same power supply as the controller, or an external 24 V AC source. A typical wiring diagram for controlling a relay by switching 24 V AC is shown below:

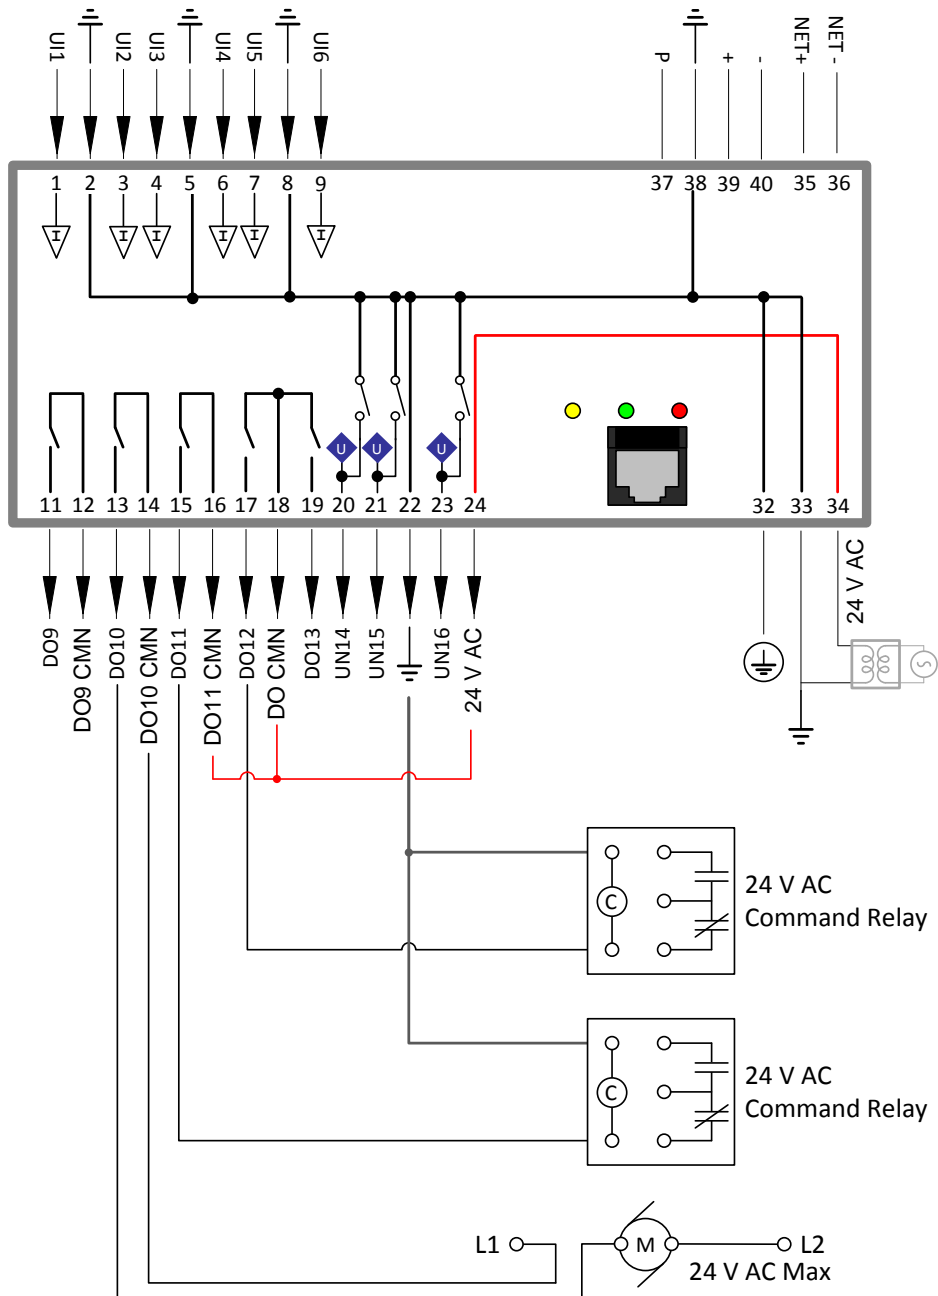

### Analog Output Terminals

The **CBT14** can be wired to control 0 ... 10 V dc devices with a current draw of less than 10 mA on UN14, UN15 and UN16. A typical wiring diagram for controlling valves and dampers is shown below:

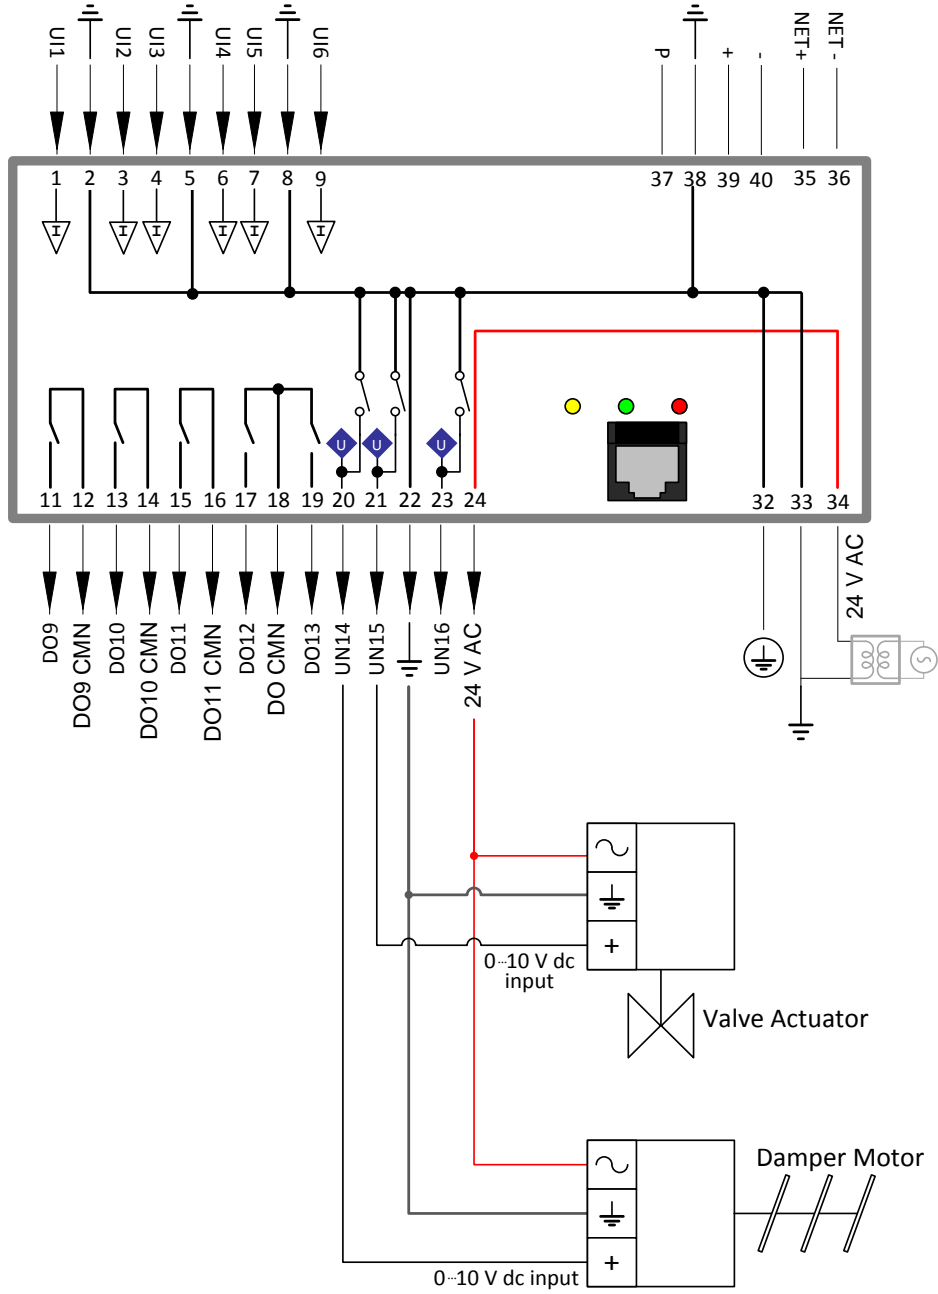

## Configuring the CBT14 for BACnet communications

The **CBT14** is shipped with the following default settings:

MS/TP Address:	01
BACnet Instance Number	(Instance Number Addressing is based on serial number from the factory)
MS/TP Baud Rate	38,400 bps
Serial to PC Baud Rate	9,600 bps


To communicate to other MS/TP devices on a BACnet MS/TP network, the MS/TP address must be set to a unique address within the MS/TP subnet. Where possible, there should be no gaps between addresses. The BACnet Instance Number must also be unique for the BACnet site. The MS/TP baud rate must match on all devices on the MS/TP subnet. The PC Baud Rate should be left at the default value of 9600 bps.

For the initial configuration of the device, the controller must first be powered on.

**Note:** Service Port (serial connection) must not be connected until after the device is powered on.

**Note:** Ensure the 24 V AC and Common wires are correctly connected to the controller. If the wires are swapped, it may cause damage to anything connected to the controller.

If connecting directly to the **CBT14**, use a **UC32-PC commissioning cable** by inserting the 9-pin D-Type serial cable into a serial port of the PC on which **NetLink** is installed. Next, insert the RJ-45 connector into the RJ-45 socket **m** on the front of the **CBT14** controller.

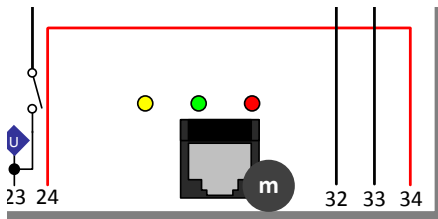


If connecting to the **CBT14** through a room sensor that has been wired for serial communications, insert the 9 pin D-Type serial cable into a serial port on the PC on which **NetLink** is installed, then insert the RJ-12 connector into the RJ-12 socket on the room sensor.

See *Wiring for Serial Communications through Room Sensor* on page 14 for more detail.

Once connected to the controller, it is possible to change the settings on the controller using the **Engineering Center** or, preferably, **NetLink**. For details on how to use the **Engineering Center**, please refer to the *Cylon BACnet Manual (MAN0106)* available from the American Auto-Matrix Toolbox (<http://www.aamatrix.com/toolbox>). For details on how to use **NetLink**, continue to the section below.


**NetLink** is available from the American Auto-Matrix Toolbox (<http://www.aamatrix.com/toolbox>). Once downloaded, **NetLink** must be installed. Follow the step by step installer and use the default settings where possible.

1. Start **NetLink** from the **Start** menu or shortcut on your desktop that was created during install.
2. Select **Preferences** and in the drop-down menu select the COM port that is assigned to the serial cable.

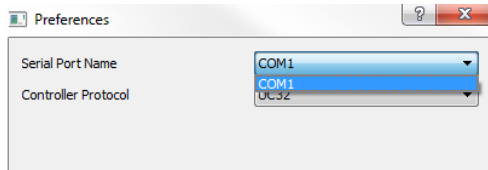


Controller Protocol must be set to "UC32".

3. Click open .

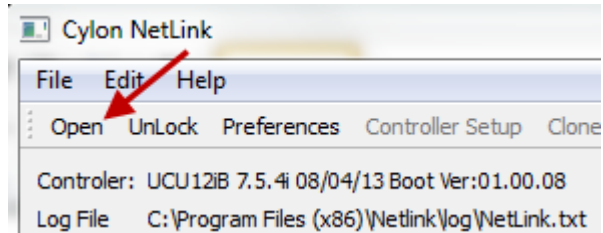


4. Navigate to where the **NetLink** screens are saved and select the "IO\_configHP.nls" screen.
5. Click on **UnLock** and type in the password.

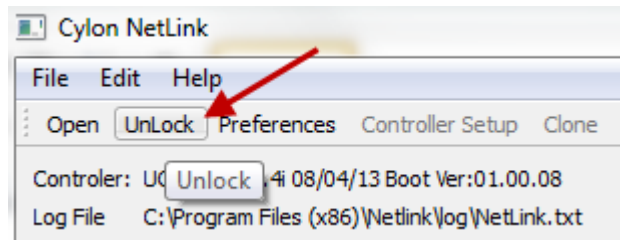


**Note:** The **NetLink** screens have been configured with a password of "*password*".

6. After unlocking the screens users can now select **Controller Setup** .

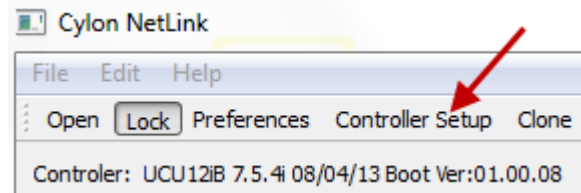

7. After selecting **Controller Setup** the following **BACnet Controller Setup** dialog will open:

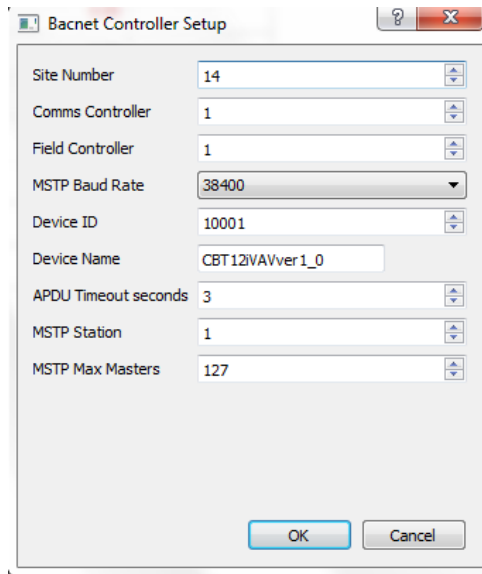

8. From this window the BACnet MS/TP configuration settings can now be configured.

**Note:** It is not required to change the Site Number or Comms Controller preset values. It is however recommended to match the Field Controller address with the MSTP Station address (see below).

**MSTP Baud Rate** is the Baud rate at which all the other devices on the subnet (fieldbus) are communicating. All devices **must** be configured for the same baud rate for communications on the subnet.

**Device ID** is the BACnet device instance number. Every BACnet controller within the site must receive a unique BACnet instance number to ensure proper communications. This BACnet instance number should be unique even across subnets. See the *Cylon BACnet Manual (MAN0106US)* for further information.

**Device Name** is the user-assigned name for the controller. This is not necessary for BACnet communications, however, it is useful to name each controller for organizational purposes.

**APDU Timeout Seconds** : leave this at the default setting of 3 seconds.

**MSTP Station** is the device MS/TP address. This is the unique address users must give each controller on the subnet (fieldbus).

**MSTP Max Masters** is the maximum address that this controller will poll when in the “poll for masters” state. Because this is a BACnet master device, it will go into this state to search for the next BACnet master device to pass the token to. To optimize the speed of the network, it is recommended that the last master device on the subnet be set at the maximum MS/TP address on the network. For example, if the last device on the subnet (fieldbus) is the **CBT14** at address 63, then users would set the **MSTP Max Masters** to 63. This will speed up communications as it will not go into the “poll for masters” state and immediately pass the token back to the **eSC** or **CBM** at MS/TP address 0.

See the *Cylon BACnet Manual (MAN0106US)* for more details regarding this functionality and for other tips on optimizing the BACnet network.



# SECTION 3 : CONFIGURING THE CBT14 ROOFTOP UNIT STRATEGY

The **CBT14** with Rooftop Unit Strategy (1M810112) has a pre-loaded strategy that is designed to be highly configurable for a wide variety of Rooftop Unit (RTU) sequences.

The sequences can be selected by writing a value to the various input and output codes that are within the strategy. There are multiple ways to configure the **CBT14** for a specific sequence. Users are able to set these configuration values through a serial connection using **NetLink** or the **Engineering Center**.

If the BACnet configuration settings have been configured, users can also set these configuration variables using **NetLink** for setting these configuration variables.

The preset configuration variables from the factory are:

- [InputConfigA \(A242\)](#) = 16
- [HeatConfigA \(A243\)](#) = 34
- [HeatConfigBStages \(A261\)](#) = 1
- [CoolConfigC \(A84\)](#) = 2
- [CoolConfigDStages \(A286\)](#) = 1



## Setting CBT14 Rooftop Unit Configuration Codes using NetLink

---

To start, the `CBT14RTUDecoder.xlsx` spreadsheet must be downloaded from the American Auto-Matrix Toolbox (<http://www.aamatrix.com/toolbox>). This spreadsheet will be used to determine the sequence for the **CBT14** controller with Rooftop Unit strategy. This spreadsheet contains all the configuration options for the **CBT14** rooftop unit strategy inputs and outputs, along with further configuration options.

### Input Configuration Codes

The inputs for the Rooftop Unit strategy are selected using [InputConfigA \(A242\)](#).

There are multiple options which can be selected for each input.

- **Control Temp** - Selections include
  - **CBT-STAT** Zone Temperature – If a **CBT-STAT** is connected
  - Sensor On `UI1` – either a Space Temperature or Return Air Temperature Sensor using a 10K Type III thermistor. All room sensors purchased from American Auto-Matrix are a 10K Type III.
  - Discharge Air Reset – A discharge air Sensor is installed on `UI3` and control is from Supply air temperature.
- **Enable OAT** – Is Outside Air sensor connected to `UI5` and is this to be used in Economizer Lockout? Answer `Yes` or `No`.
- **Enable Temp Occupancy** – Is the System to use the Temporary Override features on either the **CBT-STAT** or the Stat connected to `UI1`? Answer `Yes` or `No`.
- **Enable Setpoint Adjust** – Is the System to use the Set point value from either the **CBT-STAT** or the Stat connected to `UI1`? Answer `Yes` or `No`.
- **Internal Schedule** – Is the system to use the schedule that is programmed as part of this strategy? A no answer will allow [OccupancyCommand \(D1\)](#) and [AspectScheduleOccupancyCmd \(A40\)](#) to control Occupancy. Answer `Yes` or `No`.
- **CO2 on UI6** – Is the system to use the CO<sub>2</sub> control portion that is programmed as part of this strategy? Answer `Yes` or `No`.

The user can generate an Input code without the use of the `CBT14RTUDecoder.xlsx` spreadsheet using the following formula:

Use as a base number:

- 0 for control with the Discharge Air reset
- 8 for control with zone temperature from **CBT-STAT**
- 16 for control with sensor connected to `UI1`. (Space or Return)

Adding a 1 to the base number will allow you to use a remote outside air temperature.

Adding a 2 to the base number will allow for temporary occupancy from the stat.

Adding a 4 to the base number will allow for setpoint adjustment from the stat

Adding a 32 to the base number will allow for the use of an internal BACnet schedule.

Adding a 64 to the base number will enable CO<sub>2</sub> sequence.

- If the **CBT14** recognizes a **CBT-STAT**, it will use the stat for space temp, humidity if available, setpoint adjust and temporary occupancy. Setpoint adjustments are made by pressing the up and down arrows on the **CBT-STAT**. Temporary occupancy is achieved by pressing the forward arrow on the **CBT-STAT**.
- If there is no **CBT-STAT**, the **CBT14** can use an analog stat with a 10k type III sensor for space temperature with an option for a temporary occupancy override that shorts the temperature sensor and a 5k setpoint adjust slider.

## Heating Configuration Codes

By clicking into the field associated with each function, users will notice that there are multiple options which can be selected for each input.

The inputs for the RTU strategy are selected using [HeatConfigA \(A243\)](#).

- **Heating Type** - Selections include
  - `None` – Cooling Only Unit
  - `Staged` – Heating accomplished by enabling Stages
  - `Analog` – Heating accomplished by modulating heating valve.
  - `Tristate` – Heating accomplished by modulating Tristate device.
- **Fan Type** – Selections Include
  - `Intermittent` – Fan energizes with need for heating or cooling
  - `Continuous` – Fan On in Occupied Mode (Intermittent in Unoccupied Mode)

The user can generate an Input code without the use of the `CBT14RTUDecoder.xlsx` spreadsheet of the using the following formula:

Use as a base number:

- `0` for No Heat in Unit
- `2` for Staged Mechanical Heat
- `3` for modulating Analog values
- `4` for modulating via Tristate

Adding `32` to the base number will allow the Supply Fan to run intermittently.

Adding `64` to the base number will allow the Supply Fan to run continually in the Occupied Mode.

**Note:** If neither Supply Fan number is added to the base calculation, the fan output will be disabled.

[HeatConfigBStages \(A261\)](#) indicates the number of stages of heat required if staged mechanical heat is selected.

**Note:** There are a total of 4 digital outputs that heating and cooling share. For instance, if you have two stages of cooling or have selected tristate cooling you are allowed a maximum of two stages of heat. If three stages of cool are called for you are allowed max 1 stage of heat. If 1 stage of cool is called for you are allowed 3 stages of heat. You are allowed 4 stages of heat only if configured for no cool or modulating analog cooling.

## Cooling Configuration codes

By clicking into the field associated with each function, users will notice that there are multiple options which can be selected for each input.

The inputs for the RTU strategy are selected using CoolConfigC (A84).

- **Cooling Type** - Selections include
  - **None** – Heating Only Unit
  - **Staged** – Cooling accomplished by enabling Stages
  - **Analog** – Cooling accomplished by modulating heating valve.
  - **Tristate** – Cooling accomplished by modulating Tristate device.
- **Economizer** – Is the System to use the Economizer dampers as a stage of cooling? Answer Yes or No.
- **CO2 on UI6** – Is the system to use the CO<sub>2</sub> control portion that is programmed as part of this strategy? Answer **Yes** or **No**.

The user can generate an Input code without the use of the `CBT14RTUDecoder.xlsx` spreadsheet of the using the following formula:

Use as a base number:

- **0** for No Cool in Unit
- **2** for Staged Mechanical Cooling
- **3** for modulating Analog values
- **4** for modulating via Tristate devices

Adding **32** to the base number will enable CO2 sequence.

Adding **64** to the base number will allow the Economizer Dampers to act as the 1<sup>st</sup> stage of cooling.

[CoolConfigC \(A84\)](#) indicates the number of stages of heat required if staged mechanical cool is selected.

**Note:** There are a total of 4 digital outputs that heating and cooling share. For instance, if you have two stages of heat or have selected tristate heat you are allowed a maximum of two stages of cool. If three stages of heat are called for you are allowed max 1 stage of cool. If 1 stage of heat is called for you are allowed 3 stages of cool. You are allowed 4 stages of cool only if configured for no heat or modulating analog heat.

## Defining AOs

By default, the **AOs** are configured as direct acting 0 ... 10 V dc. However, it is possible to define any **AOs** as being reverse acting 10 ... 0 V dc. Depending on the actuator being controlled it is also possible to change the voltage range for 2 ... 10 V dc or 10 ... 2 V dc for any **AO** output.

## Writing the configuration codes to the CBT14

Now that the input and output codes have been determined, it is possible to use **NetLink** to change the configuration within the **CBT14** controller.

Connect to the controller using **NetLink** (if not already connected to controller refer to *Configuring the CBT14 for BACnet communications* on page 19). Open the `IO_configRTU.nls` screen to be able to write to the various input/output codes.

**Note:** By default, the controller is configured as Continuous Fan, 2 Stage Mechanical Heat, 2 Stage Mechanical Cool, No Economizer.

By default, `UI1` is configured with a room sensor with push button override and remote setpoint.

When first connecting to the controller using **NetLink**, the following are the configuration values that have been preconfigured at the factory:

Name	Value	Override
1 StrategyBuildIndex	201608.05	
2 InputConfigA (AS242)	12.00	
3 HeatConfigA (AS243)	66.00	
4 HeatConfigBStages (AS261)	2.00	
5 CoolConfigC (AS84)	34.00	
6 CoolConfigDStages (AS286)	2.00	
7 ZoneAirReturnAirInput (AH1)	-1000.00	<input type="checkbox"/>
8 ZoneReturnAirCalibration (AS230)	0.00	
9 ZoneOccupiedCoolSetpoint (AS200)	77.00	
10 ZoneOccupiedHeatSetpoint (AS201)	73.00	
11 ZoneUnoccupiedCoolSetpoint (AS202)	80.00	
12 ZoneUnoccupiedHeatSetpoint (AS203)	60.00	
13 SetpointSliderResistance (AH2)	10000000.00	<input type="checkbox"/>
14 SetpointSliderEffectiveOffset (A17)	2.00	
15 DischargeAirTemp (AH3)	1000.00	<input type="checkbox"/>
16 MaxCoolingDischargeAirSetpoint (AS27)	55.00	
17 MaxHeatingDischargeAirSetpoint (AS42)	100.00	
18 MinCoolingDischargeAirSetpoint (AS29)	80.00	
19 MinHeatingDischargeAirSetpoint (AS36)	70.00	
20 HeatingValve (AH14)	20.00 %	<input type="checkbox"/>
21 ModulatingHeatingAction (DS170)	Reverse	
22 CoolingValve (AH15)	0.00 %	<input type="checkbox"/>
23 ModulatingCoolingAction (DS340)	Reverse	
24 MixedAirTemp (AH4)	-1000.00	<input type="checkbox"/>
25 MaxMixedAirTemperature (AS62)	65.00	
26 OutsideAirTemp (AH5)	-1000.00	<input type="checkbox"/>
27 CO2HumidityInput (AH6)	0.02	<input type="checkbox"/>
28 CO2SensorBase (AS253)	0.00	

The values that are shown in red are values that can be changed and written to. All values that are shown in black are read only.

Having determined what the input and control configuration codes are for the desired specific application (using the `CBT14RTUDecoder.xlsx` spreadsheet), those configuration codes will need to be written to the controller. To change the input and control configuration codes, simply double-click in the appropriate value box and type in the correct code as shown below.

Name	Value	Override
1 StratgyBuildIndex	201608.05	
2 InputConfigA (AS242)	12.00	
3 HeatConfigA (AS243)	66.00	
4 HeatConfigBStages (AS261)	2.00	
5 CoolConfigC (AS84)	34.00	
6 CoolConfigDStages (AS286)	2.00	
7 ZoneAirReturnAirInput (AH1)	-1000.00	<input type="checkbox"/>

Press [Enter] on the keyboard for the changes to take effect.

When the value is changed, it should now be displayed in red.

Name	Value	Override
1 StratgyBuildIndex	201608.05	
2 InputConfigA (AS242)	20.00	
3 HeatConfigA (AS243)	66.00	
4 HeatConfigBStages (AS261)	2.00	
5 CoolConfigC (AS84)	34.00	
6 CoolConfigDStages (AS286)	2.00	
7 ZoneAirReturnAirInput (AH1)	-1000.00	<input type="checkbox"/>

Change the rest of the input and output configuration codes.

**Note:** The **CBT14** must be powered on for these values to be written to flash. If changing these values through a serial connection using **NetLink** or **Engineering Center**, it may take up to 5 minutes before the new values are written to flash.

If the device is power cycled before this time, it could potentially revert back to the default input and output configuration values.

If these values are changed using **Edifice**, **Envoy**, or another master controller via BACnet MS/TP, the controller must be powered for 24 hours before the change in value is written to flash.

These conditions apply to any writable analog or binary values within this controller.



# SECTION 4 :    CBT14 ROOFTOP UNIT CONTROL SEQUENCES

This section provides details of the typical control sequences used for most Rooftop Unit (RTU) applications. The sequences covered in this manual include the following:

## Occupancy Sequence

Occupancy can be achieved in 4 different ways:

0. Internal Schedule: When 32 is added to [InputConfigA \(A242\)](#) base number, then the Rooftop unit will be commanded to the occupied mode when the BACnet schedule returns a `True` value. Otherwise the Rooftop unit will be in unoccupied mode.
1. External schedule using [OccupancyCommand \(D1\)](#): When the point [AspectScheduleOccupancyCmd \(A40\)](#) is set to a value of 2, the Rooftop unit will be commanded to the occupied mode when [OccupancyCmd](#) (a BACnet-visible point that can be controlled from the front end) returns a true value, otherwise the Rooftop unit will be in the unoccupied mode.
2. External schedule using [AspectScheduleOccupancyCmd \(A40\)](#): When the point [OccupancyCommand \(D1\)](#) is set to a true value, the Rooftop unit will be commanded to the occupied mode when [AspectScheduleOccupancyCmd \(A40\)](#) (a BACnet visible point that can be controlled from the front end) returns a value of 2, otherwise the Rooftop unit will be in the unoccupied mode. The point [AspectScheduleOccupancyCmd \(A40\)](#) is designed to work with Aspect schedules so that a value of 2 puts the Rooftop unit into occupied mode and a value of 0 puts it into unoccupied mode.
3. Temporary occupancy: When a 2 is added to [InputConfigA \(A242\)](#) base number and during unoccupied times the strategy will respond to temporary occupancy by pressing the forward button on the **CBT-STAT** or by shorting the space temperature sensor on an analog stat. Temporary occupancy time will be defined by the configuration [MinutesTempOccupancy \(A81\)](#) in minutes.

## Fan Sequence

The RTU strategy sequence can accommodate three different fan settings: `No fan`, `Intermittent fan` and `continuous fan`.

1. **No fan**: In order to disable the fan command do not add anything to the calculation for [HeatConfigA \(A243\)](#). The fan output will not become active via the RTU strategy.
2. **Continuous Fan**: In order to configure the Rooftop unit for `continuous fan`, add 64 to [HeatConfigA \(A243\)](#). The fan will run continuously during occupied mode, and will run when calling for heating or cooling in the unoccupied mode. If deadband mode is entered from heating mode the fan will turn off after a total time of [FanOffTimerHeating \(A82\)](#) in seconds. If deadband mode is entered from cooling mode, the fan will turn off after a total time of [FanOffTimerCooling \(A28\)](#) in seconds.
3. **Intermittent fan**: In order to configure the Rooftop unit for intermittent fan add 32 to [HeatConfigA \(A243\)](#). The fan will run when calling for heating or cooling in the occupied or unoccupied mode. If deadband mode is entered from heating mode, the fan will turn off after a total time of [FanOffTimerHeating \(A82\)](#) in seconds. If deadband mode is entered from cooling mode, the fan will turn off after a total time of [FanOffTimerCooling \(A28\)](#) in seconds.

## Setpoint selection

1. The discharge air temperature setpoint [DischargeAirCoolingSetpoint \(A34\)](#) is reset based on how far the space temperature is off from the cooling setpoint [ZoneOccupiedCoolSetpoint \(A200\)](#).

If the space temperature is higher than the cooling setpoint by the value of [ZoneSetpointOffset \(A9\)](#) the Discharge Air Cooling Setpoint [DischargeAirCoolingSetpoint \(A34\)](#) modulates to [MaxCoolingDischargeAirSetpoint \(A27\)](#).



As the space temperature approaches the cooling setpoint, the Discharge Air Cooling Setpoint [DischargeAirCoolingSetpoint \(A34\)](#) modulates to [MinCoolingDischargeAirSetpoint \(A29\)](#) in a linear fashion.

2. The discharge air temperature setpoint [DischargeAirCoolingSetpoint \(A34\)](#) is reset based on how far the space temperature is off from the cooling setpoint [ZoneOccupiedCoolSetpoint \(A200\)](#).

If the space temperature is lower than the heating setpoint by the value of [ZoneSetpointOffset \(A9\)](#) the Discharge Air Heating Setpoint [DischargeAirCoolingSetpoint \(A34\)](#) modulates to [MaxHeatingDischargeAirSetpoint \(A42\)](#).

As the space temperature approaches the heating setpoint, [DischargeAirCoolingSetpoint \(A34\)](#) modulates to [MinHeatingDischargeAirSetpoint \(A36\)](#) in a linear fashion.

3. The four setpoints: are Occupied Heating Setpoint ([ZoneOccupiedHeatSetpoint \(A201\)](#)), Occupied Cooling Setpoint ([ZoneOccupiedCoolSetpoint \(A200\)](#)), Unoccupied Heating Setpoint ([ZoneUnoccupiedHeatSetpoint \(A203\)](#)), and Unoccupied Cooling Setpoint ([ZoneUnoccupiedCoolSetpoint \(A202\)](#)). In the Unoccupied mode, setpoints ([ZoneUnoccupiedCoolSetpoint \(A202\)](#) and [ZoneUnoccupiedHeatSetpoint \(A203\)](#)) are used and in Occupied mode the setpoints ([ZoneOccupiedCoolSetpoint \(A200\)](#) and [ZoneOccupiedHeatSetpoint \(A201\)](#)) are used. Also, if so configured, the setpoint offset from the setpoint adjust, either from the **CBT-STAT** or the 5k analog slider are added to the occupied setpoints in occupied mode. If [LoadShedEnable \(D87\)](#) is enabled and the mode is occupied, the value of [LoadShedOccupiedSetpointOffset \(A98\)](#) will be added to the cooling setpoint and subtracted from the heating setpoint.

## Cooling Calculation

When the Rooftop Unit is required to provide cooling, this is accomplished by one of three ways:

1. [InputConfigA \(A242\)](#) base number of 0: The Discharge Air Temperature and the reset cooling setpoint is used in the direct acting PID calculation where
  - o [CoolingDemand \(A51\)](#) is the process variable,
  - o [DischargeAirPIDGain \(A37\)](#) is the proportional gain,
  - o [DischargeAirPIDIntegral \(A38\)](#) is the integration time,
  - o [DischargeAirPIDDerivative \(A39\)](#) is the derivative time,
  - o [DischargeAirControlDB \(A131\)](#) is the deadband.

The PID is enabled by the zone temperature rising above the active cooling setpoint [DischargeAirCoolingSetpoint \(A34\)](#) +  $\frac{1}{2}$  [PIDEnableDeadband \(A19\)](#). The result of this calculation /is then transferred to the configured cooling type to control the cooling for the unit.

2. [InputConfigA \(A242\)](#) base number of 8: The CBT-Stat temperature and active cooling setpoint [ZoneOccupiedCoolSetpoint \(A200\)](#) is used in the direct acting PID calculation where
  - o [CoolingDemand \(A51\)](#) is the process variable,
  - o [ZonePIDGain \(A232\)](#) is the proportional gain,
  - o [ZonePIDIntegral \(A35\)](#) is the integration time,
  - o [ZonePIDDerivative \(A43\)](#) is the derivative time and
  - o [ZonePIDControlDB \(A133\)](#) is the control deadband for this PID.

The PID is enabled by the **CBT-STAT** temperature rising above the active cooling setpoint +  $\frac{1}{2}$  [PIDEnableDeadband \(A19\)](#). The result of this calculation is then transferred to the configured cooling type to control the cooling for the unit.

3. [InputConfigA \(A242\)](#) base number of 16: The sensor connected to [UI1](#) (Zone or Return Air [ZoneAirReturnAirInput \(A11\)](#)) and active cooling setpoint [EffectiveCoolingSetpoint \(A23\)](#) is used in the direct acting PID calculation where
  - o [CoolingDemand \(A51\)](#) is the process variable,

- [ZonePIDGain \(A232\)](#) is the proportional gain,
- [ZonePIDIntegral \(A35\)](#) is the integration time,
- [ZonePIDDerivative \(A43\)](#) is the derivative time and
- [ZonePIDControlDB \(A133\)](#) is the control deadband for this PID.

The PID is enabled by the Sensor connected to [UI1 \(ZoneAirReturnAirInput \(AI1\)\)](#) temperature rising above the active cooling setpoint +  $\frac{1}{2}$  [PIDEnableDeadband \(A19\)](#). The result of this calculation is then transferred to the configured cooling type to control the cooling for the unit.

## Cooling Sequences

### Staged Cooling

When [SystemMode \(A106\)](#) = 2 the Current Control Mode is Cooling and [CoolConfigC \(A84\)](#) equals either 2 or 66 the Mechanical Cooling Control is Mechanical Cooling, the strategy will sequence the Rooftop unit compressors based on the number of stages configured in [CoolConfigDStages \(A286\)](#) and the value of the Calculated Percent Cooling.

Assuming there are three stages of cooling configured, the strategy sequence operates as described in the paragraphs that follow.

When [SystemMode \(A106\)](#) = 0 the Current Control Mode is Deadband, the Calculated Percent is 0% and all Cooling outputs are OFF.

As the configured sensor temperature rises above the configured temperature setpoint, [SystemMode \(A106\)](#) = 2 and the Current Control mode changes to Cooling. The Calculated Percent Cooling [CoolingDemand \(A51\)](#) value increments from 0 to 100% based on the configured cooling PID constants and the amount of Error between the configured sensor temperature and the configured temperature setpoint.

As the amount of Error increases, the Calculated Percent Cooling [CoolingDemand \(A51\)](#) value increases. When the Calculated Percent Cooling value reaches 34%, the first stage Binary Output point (whichever is defined) turns ON. As each stage of cooling turns ON, the Cooling Inter-Stage Delay Timer ([CoolingStagingDelay \(A113\)](#)) starts timing.

As the Calculated Percent Cooling [CoolingDemand \(A51\)](#) increases to 67%, the second stage of cooling turns ON after the Cooling Inter-Stage Delay Timer [CoolingStagingDelay \(A113\)](#) expires. Once Stage 2 turns ON, the Cooling Inter-Stage Delay Timer [CoolingStagingDelay \(A113\)](#) starts timing.

As the Calculated Percent Cooling [CoolingDemand \(A51\)](#) value increases to 100%, the third stage of mechanical cooling turns ON after the Cooling Inter-Stage Delay Timer [CoolingStagingDelay \(A113\)](#) expires. Once Stage 3 turns ON, the Cooling Inter-Stage Delay Timer [CoolingStagingDelay \(A113\)](#) starts timing.

As the amount of Error decreases, the Calculated Percent Cooling [CoolingDemand \(A51\)](#) decreases. When the Calculated Percent Cooling [CoolingDemand \(A51\)](#) falls to 67%, the third stage of cooling turns OFF. As each stage of cooling turns OFF, the Cooling Inter-Stage Delay Timer [CoolingStagingDelay \(A113\)](#) starts timing.

As the Calculated Percent Cooling [CoolingDemand \(A51\)](#) value decreases to 34%, the second stage of cooling turns OFF after the Cooling Inter-Stage Delay Timer [CoolingStagingDelay \(A113\)](#) expires. Once Stage 2 turns OFF, the Cooling Inter-Stage Delay Timer [CoolingStagingDelay \(A113\)](#) starts timing.

As the Calculated Percent Cooling [CoolingDemand \(A51\)](#) value decreases to 0% or the Current Control Mode [SystemMode \(A106\)](#) changes to Deadband, the first stage of Cooling turns OFF after the Cooling Inter-Stage Delay Timer [CoolingStagingDelay \(A113\)](#) expires. Once Stage 1 turns OFF, the Cooling Inter-Stage Delay Timer [CoolingStagingDelay \(A113\)](#) starts timing.

The following table illustrates the percentage at which the mechanical cooling outputs are staged based on the number of stages configured.

Number of Cooling Stages	Stage 1		Stage 2		Stage 3		Stage 4	
	ON	OFF	ON	OFF	ON	OFF	ON	OFF
1	100%	0%	----	----	----	----	----	----
2	50%	0%	100%	50%	----	----	----	----
3	34%	0%	67%	34%	100%	67%	----	----
4	25%	0%	50%	25%	75%	50%	100%	75%

**Note:** Discharge Air Temperature Control with staged cooling is NOT recommended. It is extremely difficult to maintain discharge air temperature with staged cooling. American Auto-Matrix recommends that Discharge Air Control be used only when the type of cooling is configured for Analog or Tristate type control.

### Analog cooling

Analog type cooling takes the Calculated Percent Cooling [CoolingDemand \(A51\)](#) and feeds it into a 0 ... 10 V analog output so that if configured for direct action ([ModulatingCoolingAction \(D340\)](#) = 1) a calculation of 0% is 0 V dc on the output and a calculation of 100% is 10 V on the output.

### Tristate cooling

Tristate type cooling samples the heating calculation at intervals designated in seconds by [CoolingResponseTime \(A148\)](#) and uses that calculation to drive the cooling valve open or shut. Fully open or fully shut is calculated by how long it takes to drive the actuator fully open from a fully shut position. This quantity in seconds should be entered into [CoolingTravelTime \(A60\)](#).

## Heating Calculation

When the Rooftop unit is required to provide heating, this is accomplished in one of three ways:

1. [InputConfigA \(A242\)](#) base number of 0: The Discharge Air Temperature and the reset heating setpoint is used in the reverse acting PID calculation where:
  - o [HeatingDemand \(A50\)](#) is the process variable,
  - o [DischargeAirPIDGain \(A37\)](#) is the proportional gain,
  - o [DischargeAirPIDIntegral \(A38\)](#) is the integration time
  - o [DischargeAirPIDDerivative \(A39\)](#) is the derivative time and
  - o [DischargeAirControlDB \(A131\)](#) is the deadband.

The PID is enabled by the zone temperature falling below the active heating setpoint [DischargeAirHeatingSetpoint \(A26\)](#) –  $\frac{1}{2}$  [PIDEnableDeadband \(A19\)](#). The result of this calculation is then transferred to the configured heating type to control the heating for the unit.

2. [InputConfigA \(A242\)](#) base number of 8: The **CBT-STAT** temperature and active heating setpoint [EffectiveHeatingSetpoint \(A22\)](#) is used in the reverse acting PID calculation where:
  - o [HeatingDemand \(A50\)](#) is the process variable.
  - o [ZonePIDGain \(A232\)](#) is the proportional gain,
  - o [ZonePIDIntegral \(A35\)](#) is the integration time,
  - o [ZonePIDDerivative \(A43\)](#) is the derivative time and
  - o [ZonePIDControlDB \(A133\)](#) is the deadband for this PID.

The PID is enabled by the CBT-Stat temperature falling below the active heating setpoint [EffectiveHeatingSetpoint \(A22\)](#) –  $\frac{1}{2}$  [PIDEnableDeadband \(A19\)](#). The result of this calculation is then transferred to the configured cooling type to control the Heating for the unit.

3. [InputConfigA \(A242\)](#) base number of 16: The sensor connected to UI1 (Zone or Return Air) and active heating setpoint [EffectiveHeatingSetpoint \(A22\)](#) is used in the reverse acting PID calculation where:
  - o [HeatingDemand \(A50\)](#) is the process variable.
  - o [ZonePIDGain \(A232\)](#) is the proportional gain,
  - o [ZonePIDIntegral \(A35\)](#) is the integration time,
  - o [ZonePIDDerivative \(A43\)](#) is the derivative time and
  - o [ZonePIDControlDB \(A133\)](#) is the deadband for this PID.

The PID is enabled by the Sensor connected to UI1 temperature falling below the active heating setpoint [EffectiveHeatingSetpoint \(A22\)](#) –  $\frac{1}{2}$  [PIDEnableDeadband \(A19\)](#). The result of this calculation is then transferred to the configured heating type to control the cooling for the unit.

## Heating Sequences

### Staged Heating

When [SystemMode \(A106\)](#) = 1 the Current Control Mode is Heating and [HeatConfigA \(A243\)](#) equals either 34 or 66 the Mechanical Heating Control is Mechanical Heating, the Rooftop will sequence the heating stages based on the number of stages configured in [HeatConfigBStages \(A261\)](#) and the value of the Calculated Percent Cooling.

Assuming there are three stages of cooling configured, the Rooftop sequence operates as described in the paragraphs that follow.

When [SystemMode \(A106\)](#) = 0 the Current Control Mode is Deadband, the Calculated Percent is 0% and all heating outputs are OFF. As the configured sensor temperature falls below the configured temperature setpoint, [SystemMode \(A106\)](#) = 1 and the Current Control mode changes to Heating. The Calculated Percent Heating [HeatingDemand \(A50\)](#) value increments from 0 to 100% based on the configured cooling PID constants and the amount of Error between the configured sensor temperature and the configured temperature setpoint.

As the amount of Error increases, the Calculated Percent Heating [HeatingDemand \(A50\)](#) value increases. When the Calculated Percent Heating value reaches 34%, the first stage Binary Output point (whichever is defined) turns ON. As each stage of heating turns ON, the Heating Inter-Stage Delay Timer [HeatingStagingDelay \(A52\)](#) starts timing.

As the Calculated Percent Heating [HeatingDemand \(A50\)](#) increases to 67%, the second stage of heating turns ON after the Heating Inter-Stage Delay Timer [HeatingStagingDelay \(A52\)](#) expires. Once Stage 2 turns ON, the Heating Inter-Stage Delay Timer [HeatingStagingDelay \(A52\)](#) starts timing.

As the Calculated Percent Heating [HeatingDemand \(A50\)](#) value increases to 100%, the third stage of mechanical heating turns ON after the Heating Inter-Stage Delay Timer [HeatingStagingDelay \(A52\)](#) expires. Once Stage 3 turns ON, the Heating Inter-Stage Delay Timer [HeatingStagingDelay \(A52\)](#) starts timing.

As the amount of Error decreases, the Calculated Percent Heating [HeatingDemand \(A50\)](#) decreases. When the Calculated Percent Heating [HeatingDemand \(A50\)](#) falls to 67%, the third stage of heating turns OFF. As each stage of heating turns OFF, the Heating Inter-Stage Delay Timer [HeatingStagingDelay \(A52\)](#) starts timing.

As the Calculated Percent Heating [HeatingDemand \(A50\)](#) value decreases to 34%, the second stage of heating turns OFF after the Heating Inter-Stage Delay Timer [HeatingStagingDelay \(A52\)](#) expires. Once Stage 2 turns OFF, the Heating Inter-Stage Delay Timer [HeatingStagingDelay \(A52\)](#) starts timing.

As the Calculated Percent Heating [HeatingDemand \(A50\)](#) value decreases to 0% or the Current Control Mode [SystemMode \(A106\)](#) changes to Deadband, the first stage of Heating turns OFF after the Heating Inter-Stage Delay Timer [HeatingStagingDelay \(A52\)](#) expires. Once Stage 1 turns OFF, the Heating Inter-Stage Delay Timer [HeatingStagingDelay \(A52\)](#) starts timing.

This table illustrates the percentage at which the mechanical heating outputs are staged based on the number of stages configured.

Number of Cooling Stages	Stage 1		Stage 2		Stage 3		Stage 4	
	ON	OFF	ON	OFF	ON	OFF	ON	OFF
1	100%	0%	----	----	----	----	----	----
2	50%	0%	100%	50%	----	----	----	----
3	34%	0%	67%	34%	100%	67%	----	----
4	25%	0%	50%	25%	75%	50%	100%	75%

Calculated Percent Heating [HeatingDemand \(A50\)](#)

**Note:** Discharge Air Temperature Control with staged heating is NOT recommended. It is extremely difficult to maintain discharge air temperature with staged heating. It is recommended that Discharge Air Temperature control be used only when the type of heating is configured for Analog or Tristate type control.

### Analog heating

Analog type heating takes the Calculated Percent Heating [HeatingDemand \(A50\)](#) and feeds it into a 0 ... 10 V analog output so that if configured for direct action ([ModulatingHeatingAction \(D170\)](#) = 1) a calculation of 0% is 0 V dc on the output and a calculation of 100% is 10 V on the output.

### Tristate heating

Tristate type heating samples the heating calculation at intervals designated in seconds by [HeatingResponseTime \(A99\)](#) and uses that calculation to drive the heating valve open or shut. Fully open or fully shut is calculated by how long it takes to drive the actuator fully open from a fully shut position. This quantity in seconds should be entered into [HeatingTravelTime \(A95\)](#).

## Economizer sequence

To configure the Rooftop unit for an economizer cycle, add 64 to the base number in [CoolConfigC \(A84\)](#). The economizer will work as a first stage of cooling when enabled. The economizer is enabled when the mixed air temperature is greater than the mixed air temperature lockout [MixedAirEconomizerLockout \(A69\)](#) and when the outside air is greater than the outside air temperature lockout [OutsideAirEconomizerLockout \(A64\)](#) and when the economizer is enabled [HeatingDemand \(A50\)](#) greater than 64. The economizer will modulate from 0 if the cooling PID is 0 up to 100 if the cooling PID reaches the [EconomizerStagingPercent \(A44\)](#). If the cooling PID rises above the [EconomizerStagingPercent \(A44\)](#), mechanical cooling will stage on as if the cooling PID minus the [EconomizerStagingPercent \(A44\)](#) was the cooling calculation. If the economizer is locked out or not configured, the cooling calculation will work directly off the cooling PID.

## CO<sub>2</sub> sequence

A 0 ... 10 V CO<sub>2</sub> sensor wired to 016 will enable this sequence. This sensor will be rescaled to read between [CO2SensorBase \(A253\)](#) and [CO2SensorSpan \(A254\)](#), and this reading will be sent to a forward-acting PID. If the CO<sub>2</sub> levels rise above [CO2Setpoint \(A255\)](#), the PID will ramp up and will open the outside air damper proportionally unless there is an economizer lockout condition or the economizer damper is being shut due to low mixed air temperature.

Initial values for the CO<sub>2</sub> control are:

- [CO2SensorBase \(A253\)](#) = 0,
- [CO2SensorSpan \(A254\)](#) = 2000 and
- [CO2Setpoint \(A255\)](#) = 500.

## Dehumidifying Sequence

De-Humidification cycle is enabled by configuring in [CoolConfigC \(A84\)](#). Relative humidity is sent to the controller through the **CBT-STAT**. This reading is brought into a PID controlling to [LocalDehumidificationSetpoint \(A258\)](#) initially set to 65% RH. If the PID reads greater than 99 the dehumidifying cycle will begin. It will end when the PID reads less than 1. The dehumidifying cycle will replace the cooling calculation, which is normally 0 in heating or deadband mode with [LocalDehumidificationCalc \(A49\)](#) until the dehumidifying cycle ends. During the dehumidifying cycle the economizer is disabled. This allows for heating and cooling to run simultaneously.

SECTION 5 : APPENDIX : LIST OF  
CBT14 POINTS

The tables in this Appendix list and describe the points in the **CBT14** Rooftop unit strategy, along with the units and the default value for each point.

## Analog Points

### Hardware (I/O)

POINT	POINT TYPE	OBJECTNAME	DESCRIPTION	UNITS
1	Analog Input	<i>ZoneAirReturnAirInput (AI1)</i>	Space or Return Air Temperature reading from sensor	°F
2	Analog Input	<i>SetpointSliderResistance (AI2)</i>	Value of Setpoint POT in Ohms	Ohms
3	Analog Input	<i>DischargeAirTemp (AI3)</i>	Discharge Air Temperature reading from sensor	°F
4	Analog Input	<i>MixedAirTemp (AI4)</i>	Mixed Air Temperature reading from sensor	°F
5	Analog Input	<i>OudsideAirTemp (AI5)</i>	Outside Air Temperature reading from sensor	°F
6	Analog Input	<i>CO2HumidityInput (AI6)</i>	CO2 or Humidity reading from sensor	%
14	Analog Output	<i>HeatingValve (UN14)</i>	Heating Valve Command Position	%
15	Analog Output	<i>CoolingValve (UN15)</i>	Cooling Valve Command Position	%
16	Analog Output	<i>OutsideAirDamper (UN16)</i>	Economizer Damper Command Position	%

### Values

POINT	POINT TYPE	OBJECTNAME	DESCRIPTION	UNITS
10	Analog	<i>ZoneTemp (A10)</i>	Current zone temperature for control	°F
14	Analog	<i>StratgeyBuildIndex (A14)</i>	Revision Number of Strategy	no_units
17	Analog	<i>SetpointSliderEffectiveOffset (A17)</i>	Current offset to setpoint from sensor POT	°F
22	Analog	<i>EffectiveHeatingSetpoint (A22)</i>	Active Heating Setpoint	°F
23	Analog	<i>EffectiveCoolingSetpoint (A23)</i>	Active Cooling Setpoint	°F
26	Analog	<i>DischargeAirHeatingSetpoint (A26)</i>	Discharge air heating setpoint	°F
33	Analog	<i>ZoneCoolPIDCalc (A33)</i>	Cool Master Calculated Percent	%
34	Analog	<i>DischargeAirCoolingSetpoint (A34)</i>	Discharge air cooling setpoint	°F
49	Analog	<i>LocalDehumidificationCalc (A49)</i>	De-Humidification Master Calculated Percent	%
50	Analog	<i>HeatingDemand (A50)</i>	Heating Demand	%
51	Analog	<i>CoolingDemand (A51)</i>	Cooling Demand	%
73	Analog	<i>CO2Value (A73)</i>	Local CO2 Value	PPM
75	Analog	<i>ZoneRelativeHumidity (A75)</i>	Local Humidity value	%rh
106	Analog	<i>SystemMode (A106)</i>	Heating, Cooling or Deadband	no_units

### Setpoints

POINT	POINT TYPE	OBJECTNAME	DESCRIPTION	IMPERIAL		METRIC		MIN	MAX
				DEFAULT VALUE	UNIT	DEFAULT VALUE	UNIT		
1	Analog Setpoint	<i>SetpointAdjustStepSize (A1)</i>	Value of Adjustment to the CBT-Stat	5	°F	0.25	°C	0	100
9	Analog Setpoint	<i>ZoneSetpointOffset (A9)</i>	Deadband for Resetting of Discharge air Setpoint	0	°F	4	°C	0	100
19	Analog Setpoint	<i>PIDEnableDeadband (A19)</i>	Discharge Air Setpoint Enable Deadband	2	°F	2	°C	0	100
27	Analog Setpoint	<i>MaxCoolingDischargeAirSetpoint (A27)</i>	Discharge Air Reset value for maximum Cooling Discharge air setpoint	55	°F	12.8	°C	0	100
28	Analog Setpoint	<i>FanOffTimerCooling (A28)</i>	If the state enters Deadband from cooling when in On Occupied delay fan from going off for this time	30	Sec	30	Sec	0	1000
29	Analog Setpoint	<i>MinCoolingDischargeAirSetpoint (A29)</i>	Discharge Air Reset value for minimum Cooling Discharge air setpoint	80	°F	26.7	°C	0	100
35	Analog Setpoint	<i>ZonePIDIntegral (A35)</i>	Zone PID Integral Time	900	no-units	900	no-units	0	10000
36	Analog Setpoint	<i>MinHeatingDischargeAirSetpoint (A36)</i>	Discharge Air Reset value for minimum Heating Discharge air setpoint	70	°F	21.1	°C	0	100



POINT	POINT TYPE	OBJECTNAME	DESCRIPTION	IMPERIAL		METRIC		MIN	MAX
				DEFAULT VALUE	UNIT	DEFAULT VALUE	UNIT		
37	Analog Setpoint	<i>DischargeAirPIDGain (A37)</i>	Discharge Air PID Proportional Gain	5	no-units	5	no-units	0	1000
38	Analog Setpoint	<i>DischargeAirPIDIntegral (A38)</i>	Discharge Air PID Integral Time	30	no-units	30	no-units	0	10000
39	Analog Setpoint	<i>DischargeAirPIDDerivative (A39)</i>	Discharge Air PID Derivative Time	0	no-units	0	no-units	0	1000
40	Analog Setpoint	<i>AspectScheduleOccupancyCmd (A40)</i>	Aspect Schedule Connection Point	2	no-units	2	no-units	0	100
42	Analog Setpoint	<i>MaxHeatingDischargeAirSetpoint (A42)</i>	Discharge Air Reset value for maximum Heating Discharge air setpoint	100	°F	37.8	°C	0	100
43	Analog Setpoint	<i>ZonePIDDerivative (A43)</i>	Zone PID Derivative Time	0	no-units	0	no-units	0	1000
44	Analog Setpoint	<i>EconomizerStagingPercent (A44)</i>	Staging Control Point	30	%	30	%	0	100
52	Analog Setpoint	<i>HeatingStagingDelay (A52)</i>	Heating Inter-Stage Delay Time	5	Sec	5	Sec	0	1000
59	Analog Setpoint	<i>AnalogDeHumidCoolingPct (A59)</i>	Calculate Percent automatically for De-Humid if staged cool is called for.	34	%	34	%	0	100
60	Analog Setpoint	<i>CoolingTravelTime (A60)</i>	Tristate - Time it takes for Cooling Valve to go from full close to full open	120	Sec	120	Sec	0	1000
62	Analog Setpoint	<i>MaxMixedAirTemperature (A62)</i>	Mixed Air Temperature Setpoint	72	°F	65	°C	0	100
63	Analog Setpoint	<i>MixedAirPIDGain (A63)</i>	Mixed Air PID Proportional Gain	30	no-units	30	no-units	0	1000
64	Analog Setpoint	<i>OutsideAirEconomizerLockout (A64)</i>	Outside Air Temperature Lockout Setpoint for Economizer Dampers	0	°F	10	°C	0	100
69	Analog Setpoint	<i>MixedAirEconomizerLockout (A69)</i>	Mixed Air Temperature Lockout Setpoint for Economizer Dampers	30	°F	10	°C	0	100
70	Analog Setpoint	<i>RemoteOutsideAir (A70)</i>	Outside Air Temperature value if in remote mode	72	°F	22	°C	0	100
79	Analog Setpoint	<i>OutsideAirDamperMinimumPosition (A79)</i>	Normal Modes Economizer Dampers Minimum Position	20	%	20	%	0	100
81	Analog Setpoint	<i>MinutesTempOccupancy (A81)</i>	Temporary Occupancy Over-Ride Time	1000	Min	1000	Min	0	10000
82	Analog Setpoint	<i>FanOffTimerHeating (A82)</i>	If the state enters Deadband from heating when in On Occupied delay fan from going off for this time	30	Sec	30	Sec	0	1000
84	Analog Setpoint	<i>CoolConfigC (A84)</i>	Strategy Cooling configuration setpoint	2	no-units	2	no-units	0	255
95	Analog Setpoint	<i>HeatingTravelTime (A95)</i>	Tristate - Time it takes for Heating Valve to go from full close to full open	120	Sec	120	Sec	0	1000
97	Analog Setpoint	<i>DehumidificationGain (A97)</i>	De-Humidification PID Proportional Gain	10	no-units	10	no-units	1	1000
98	Analog Setpoint	<i>LoadShedOccupiedSetpointOffset (A98)</i>	Number of degrees by which occupied setpoints are offset when load shed mode is enabled.	2	°F	1	°C	0	100
99	Analog Setpoint	<i>HeatingResponseTime (A99)</i>	Tristate Heating output valve travel time	120	Sec	120	Sec	0	1000
108	Analog Setpoint	<i>CoolingOnOff (A108)</i>	Cooling Minimum On and Off Time	5	Sec	5	Sec	0	1000
113	Analog Setpoint	<i>CoolingStagingDelay (A113)</i>	Cooling Inter-Stage Delay Time	5	Sec	5	Sec	0	1000
127	Analog Setpoint	<i>OutsideAirDamperMinimumPosition (A127)</i>	Normal Modes Economizer Dampers Minimum Position	20	%	20	%	0	100
131	Analog Setpoint	<i>DischargeAirControlDB (A131)</i>	Deadband for Control of the Discharge Air PID	1	no-units	1	no-units	0	1000
133	Analog Setpoint	<i>ZonePIDControlDB (A133)</i>	Deadband for Control of the Zone PID	1	°F	1	°C	0	1000
148	Analog Setpoint	<i>CoolingResponseTime (A148)</i>	Tristate Cooling output valve travel time	120	Sec	120	Sec	0	1000
200	Analog Setpoint	<i>ZoneOccupiedCoolSetpoint (A200)</i>	Occupied Cooling setpoint	75	°F	23	°C	0	100
201	Analog Setpoint	<i>ZoneOccupiedHeatSetpoint (A201)</i>	Zone Occupied heating setpoint	71	°F	21	°C	0	100
202	Analog Setpoint	<i>ZoneUnoccupiedCoolSetpoint (A202)</i>	Zone Unoccupied cooling setpoint	85	°F	26	°C	0	100
203	Analog Setpoint	<i>ZoneUnoccupiedHeatSetpoint (A203)</i>	Zone Unoccupied heating setpoint	65	°F	18	°C	0	100
230	Analog Setpoint	<i>ZoneReturnAirCalibration (A230)</i>	Calibration Point for Sensor on UI1	0	°F	0	°C	0	100
231	Analog Setpoint	<i>SetpointsSliderSpan (A231)</i>	Zone control slider range setpoint	4	°F	2	°C	0	100
232	Analog Setpoint	<i>ZonePIDGain (A232)</i>	Zone temperature PID gain	30	no-units	30	no-units	0	1000

POINT	POINT TYPE	OBJECTNAME	DESCRIPTION	IMPERIAL		METRIC		MIN	MAX
				DEFAULT VALUE	UNIT	DEFAULT VALUE	UNIT		
242	Analog Setpoint	<i>InputConfigA (A242)</i>	Strategy Input configuration setpoint	20	no-units	20	no-units	0	255
243	Analog Setpoint	<i>HeatConfigA (A243)</i>	Strategy Heating configuration setpoint	34	no-units	34	no-units	0	255
253	Analog Setpoint	<i>CO2SensorBase (A253)</i>	Base Value for conversion of UI6	0	P.P.M	0	P.P.M	0	100
254	Analog Setpoint	<i>CO2SensorSpan (A254)</i>	Range Value for conversion of UI6	2000	P.P.M	2000	P.P.M	0	10000
255	Analog Setpoint	<i>CO2Setpoint (A255)</i>	Setpoint when UI6 is used for CO2	500	P.P.M	500	P.P.M	0	1000
258	Analog Setpoint	<i>LocalDehumidificationSetpoint (A258)</i>	Setpoint when UI6 is used for De-Humidification	65	%rh	65	%rh	0	100
261	Analog Setpoint	<i>HeatConfigBStages (A261)</i>	Strategy Heating configuration setpoint	2	no-units	2	no-units	0	4
286	Analog Setpoint	<i>CoolConfigDStages (A286)</i>	Strategy Heating configuration setpoint	2	no-units	2	no-units	0	4

## Digital Points

### Hardware (I/O)

POINT	POINT TYPE	OBJECTNAME	DESCRIPTION	UNITS 0/OFF	UNITS 1/ON
9	Digital Output	<i>Fan (DO9)</i>	Supply Fan Enable/Disable	On	Off
10	Digital Output	<i>DO_2 (D10)</i>	Either Heating or Cooling Enable/Disable (See Configuration for explanation)	On	Off
11	Digital Output	<i>DO_3 (DO11)</i>	Either Heating or Cooling Enable/Disable (See Configuration for explanation)	On	Off
12	Digital Output	<i>DO_4 (DO12)</i>	Either Heating or Cooling Enable/Disable (See Configuration for explanation)	On	Off
13	Digital Output	<i>DO_5 (DO13)</i>	Either Heating or Cooling Enable/Disable (See Configuration for explanation)	On	Off

### Values

POINT	POINT TYPE	OBJECTNAME	DESCRIPTION	UNITS 0/OFF	UNITS 1/ON
4	Digital	<i>HeatingMode (D4)</i>	Heating Mode Active	On	Off
5	Digital	<i>CoolingMode (D5)</i>	Cooling Mode Active	On	Off
6	Digital	<i>OccupancyStatus (D6)</i>	Occupancy mode status	On	Off
10	Digital	<i>DigVirtA (D10)</i>	Internal BACnet Schedule Connection Point	On	Off
32	Digital	<i>NoHeatingConfig (D32)</i>	Is Heating not required	On	Off
35	Digital	<i>AnalogModulatingHeating (D35)</i>	Is Modulating Heat required	On	Off
36	Digital	<i>TristateModulatingHeating (D36)</i>	Is Tristate	On	Off
53	Digital	<i>HeatingOnOff (D53)</i>	Heating State	On	Off
73	Digital	<i>DeadBandMode (D73)</i>	De-Humidification is in deadband mode	On	Off
86	Digital	<i>EconomizerEnable (D86)</i>	Is Economizer Dampers enabled	On	Off
106	Digital	<i>IllegalSetpoints (D106)</i>	Is an Illegal Setpoint entered?	Alarm	Normal
191	Digital	<i>NoCoolingConfig (D191)</i>	Is Cooling not required	On	Off
192	Digital	<i>DutyStageA (D192)</i>	Staged Mechanical Cooling ND NO Duty Cycle needed	On	Off
193	Digital	<i>StagedCooling (D193)</i>	Staged Cooling not required	On	Off
194	Digital	<i>AnalogModulatingCooling (D194)</i>	Either Tristate or Modulating Cooling is required	On	Off
195	Digital	<i>MODTRIC (D195)</i>	Tristate Cooling Required	On	Off
332	Digital	<i>LocalDehumidControl (D332)</i>	De-Humidification Control Required	Enable	Disable
334	Digital	<i>LocalCo2Control (D334)</i>	CO2 Control Required	Enable	Disable
350	Digital	<i>OneStageHeating (D350)</i>	Only One Stage of Heating in System	On	Off
351	Digital	<i>TwoStageHeating (D351)</i>	Only Two Stages of Heating in System	On	Off
352	Digital	<i>ThreeStageHeating (D352)</i>	Only Three Stages of Heating in System	On	Off
353	Digital	<i>FourStageHeating (D353)</i>	Only Four Stages of Heating in System	On	Off
357	Digital	<i>OneStageCooling (D357)</i>	Only One Stage of Cooling in System	On	Off
358	Digital	<i>TwoStageCooling (D358)</i>	Only Two Stages of Cooling in System	On	Off
359	Digital	<i>ThreeStageCooling (D359)</i>	Only Three Stages of Cooling in System	On	Off
360	Digital	<i>FourStageCooling (D360)</i>	Only Four Stages of Cooling in System	On	Off

### Setpoints

POINT	POINT TYPE	OBJECTNAME	DESCRIPTION	DEFAULT VALUE	UNITS 0/OFF	UNITS 1/ON
1	Digital Setpoint	<i>OccupancyCommand (D1)</i>	Occupancy command	Occ	Occ	Non Occ
8	Digital Setpoint	<i>House (D8)</i>	CBT-Stat House Indicator	On	On	Off
87	Digital Setpoint	<i>LoadShedEnable (D87)</i>	Load Shed Enable Command	Disable	Enable	Disable
170	Digital Setpoint	<i>ModulatingHeatingAction (D170)</i>	Heating Valve Action	Reverse	Reverse	Forward
180	Digital Setpoint	<i>ModulatingHeatingFailPosition (D180)</i>	Heating Valve Fails in what position	Closed	Closed	Open
249	Digital Setpoint	<i>EmergencyPurgeCmd (D249)</i>	Put Unit into Purge Mode	Off	On	Off

POINT	POINT TYPE	OBJECTNAME	DESCRIPTION	DEFAULT VALUE	UNITS 0/OFF	UNITS 1/ON
250	Digital Setpoint	<i>EmergencyStarveCmd (D250)</i>	Put Unit into Starve Mode	Off	On	Off
330	Digital Setpoint	<i>RemoteOutsideAirEnable (D330)</i>	Enable Remote Outside Air Setpoint	On	On	Off
340	Digital Setpoint	<i>ModulatingCoolingAction (D340)</i>	Cooling Valve Action	Reverse	Reverse	Forward
341	Digital Setpoint	<i>ModulatingCoolingFailPosition (D341)</i>	Cooling Valve Fails in what position	Closed	Closed	Open

## Time Schedules

POINT	POINT TYPE	OBJECTNAME	DESCRIPTION	UNITS 0/OFF	UNITS 1/ON
200	BACnet Schedule	<i>InternalSchedule (D200)</i>	BACnet Schedule		





**AMERICAN AUTO-MATRIX**  
ONE TECHNOLOGY LANE  
EXPORT, PA 15632  
(877) AAM-HVAC [P]  
(724) 327-6124 [F]

**[WWW.AAMATRIX.COM](http://WWW.AAMATRIX.COM)**