

CBV Jumper Settings

Products Affected: CBV-2U4-3T-IMP, CBV-2U4-3T-N-IMP, CBV-2U4-3T-N-SI, CBV-2U4-3T-SI, CBV-2U4-3T-FA-IMP, CBV-2U4-3T-N-FA-IMP, CBV-2U4-3T-N-FA-SI, CBV-2U4-3T-FA-SI.

Summary

Some CBV-2U4-3T-N-FA-IMP, CBV-2U4-3T-N-FA-SI, CBV-2U4-3T-N-IMP and CBV-2U4-3T-N-SI product were shipped with incorrect actuator jumper settings. This can be remedied by following the below instruction.

Detail

The actuator jumpers are located under the CBV housing at the bottom of the device, just below the actuator port as shown in *Fig 1*



Fig 1 Location of Actuator Port and jumpers

For products CBV-2U4-3T-N-FA-IMP, CBV-2U4-3T-N-FA-SI, CBV-2U4-3T-N-IMP and CBV-2U4-3T-N-SI, the jumpers have possibly been set in error to the *integrated actuator* setting. These should be changed to the *external actuator* setting as shown below in *Fig 2*

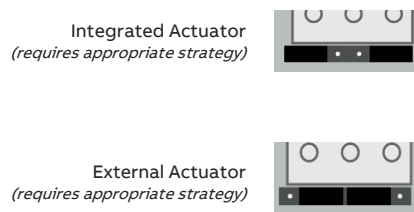


Fig 2 Actuator Port jumper settings

For more information, contact your local area sales manager.

For more information on FusionAir see:

- North America <https://abbcommunity.com/>
- Europe/ROW <http://support.cylon.com/>